



Safety Information for Engine Chain Saws

This page contains important safety information for those who handle engine chain saws. Please read this information carefully and use the engine chain saws in a safe manner.

STORE PROPERLY



Mandatory action sign

This signifies an action you must perform.



Prohibition sign

If you ignore these prohibitions, it may lead to serious or fatal injury.

READ AND UNDERSTAND THE INSTRUCTION MANUAL



Improper and unsafe use of an engine chain saw may result in serious injury.

Please read the owner's manual enclosed with the product thoroughly before using any chain saw.

For a downloadable pdf version of an owner's manual, please visit the product detail page, click on the link for Owner's Manual.

 
PRIOR TO OPERATION



Use safety equipment.

Always wear eye protection (a safety face shield or goggles), hearing protection, head protection (a helmet), boots with steel toe-caps and nonslip soles, long pants and gloves.

Dust mask must be used for appropriate conditions.

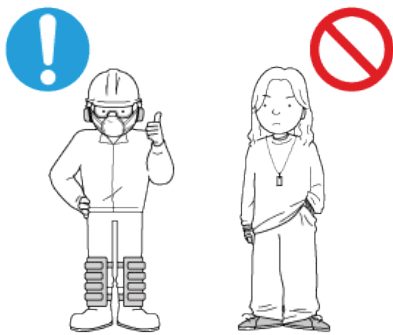

Loose clothing, jewelry or long hair caught in a moving saw chain can cause serious injury.

Always wear jackets and trousers that are safety protective.

Do not wear loose clothing, jewelry, short pants or sandals, or go barefoot. Contain long hair.



Stop engine before removing fuel-cap when fueling.

Do not smoke or allow smoking near fuel or the tool, or while using the tool. Mix and pour fuel outdoors and where there are no sparks or flames.

 


Always pay attention when handling fuel.


Always have good ventilation when handling fuel inside buildings, but never mix and pour fuel indoors.

Fuel is highly flammable and it is possible to cause serious personal injury when inhaling or spilling on your body.

PRIOR TO OPERATION

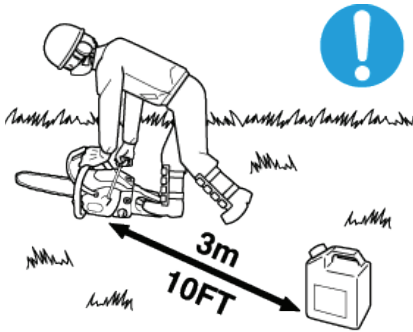

 Move at least 10 ft (3 m) away from fueling site before starting engine.

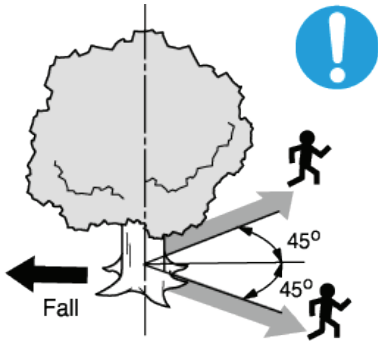

Before cutting a standing tree, ensure that there is no other person or obstacle in the falling direction.

 
Check whether you can retreat in the directions shown on the drawing.

SAFETY RULES FOR CHAIN SAWS



During operation, hold chain saw firmly with both hands.

A single hand operation may cause serious injury.

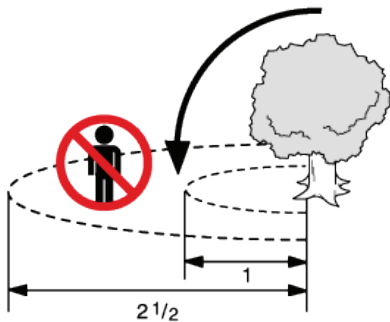


While cutting a standing tree, ensure that no other person is within a distance of 2 1/2 tree lengths from the tree.

SAFETY RULES FOR CHAIN SAWS



 Keep firm footing and balance.

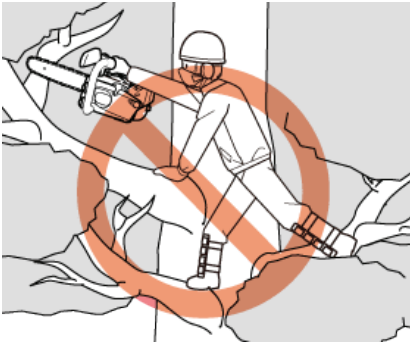

Do not over-reach. Never use the saw above shoulder height.



Never start or run the engine indoors.

Breathing exhaust gas can cause serious or fatal injury.



Keep all parts of your body away from the muffler when the engine is running and while the engine is cooling down.



Keep all parts of your body away from saw chain when the engine is running.

 
SAFETY RULES FOR CHAIN SAWS



Once you have started the engine, do not put the tool on flammable materials such as dried grass.

Beware of the muffler which is still hot while the engine is cooling down.

AVOID ACCIDENTS FROM KICKBACK

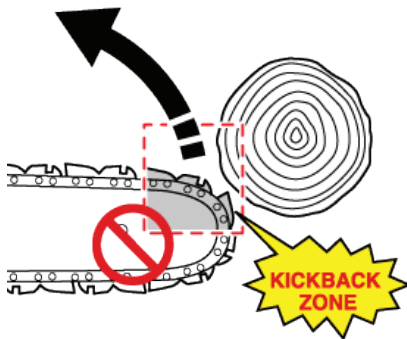


Do not hit the **KICKBACK ZONE** of the guide bar and saw chain on an object such as log or branch, otherwise the violent backward and/or upward motion of the chain saw guide bar may occur unexpectedly and such motion (**KICKBACK**) can cause serious or fatal injury.

What is **KICKBACK**?


KICKBACK is the violent backward and/or upward motion of the chain saw guide bar occurring when the saw chain (**KICKBACK ZONE**) near the nose or tip of the guide bar contacts any object, such as log or branch, or when the wood pinches the saw chain in the cut.

 KICKBACK can cause you to lose the control of the chain saw suddenly, which may result in serious injury.

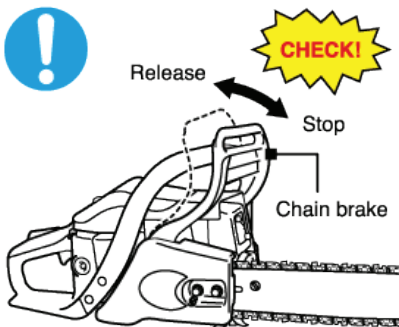

Check whether the **CHAIN BRAKE** (a device for stopping the chain) works properly before use.

 
USE PROPERLY

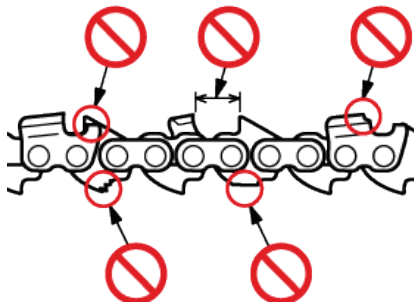

Do not use dull or damaged saw chain.

USE PROPERLY

 Frequently check the tension of the saw chain.

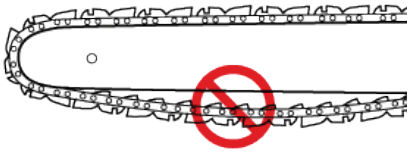

Improperly set saw chain may cause serious injury.



Always ensure that the engine is shut off and any cutting attachments have completely stopped when assembling cutting attachment, or before clearing debris from the cutting attachment.



If the tool appears defective or is operating abnormally, stop using immediately.



Gloves should be used when maintaining the tool (sharpening, replacing or touching saw chain, or adjusting chain tension).



Use only genuine HITACHI replacement parts as recommended by the manufacturer.



Never alter or modify your tool.

Quick Check List for use: YOU MUST ...

Check! ⇩

| | | |
|--|--|--------------------------|
| BEFORE use, | read the Instruction Manual. | <input type="checkbox"/> |
| | use safety equipment. | <input type="checkbox"/> |
| | always wear eye protection (a safety face shield or goggles), hearing protection, head protection (a helmet), boots with steel toe-caps and nonslip soles, long pants and gloves. | <input type="checkbox"/> |
| | use dust mask for appropriate conditions. | <input type="checkbox"/> |
| | always wear jackets and trousers that are safety protective. | <input type="checkbox"/> |
| | not wear loose clothing, jewelry, short pants or sandals, or go barefoot. | <input type="checkbox"/> |
| | contain long hair. | <input type="checkbox"/> |
| | stop engine before removing fuel cap when fueling. | <input type="checkbox"/> |
| | do not smoke or allow smoking near fuel or the tool, or while using the tool. | <input type="checkbox"/> |
| | mix and pour fuel outdoors and where there are no sparks or flames. | <input type="checkbox"/> |
| | always have good ventilation when handling fuel inside building, but never mix and pour fuel indoors. | <input type="checkbox"/> |
| | check that the saw chain is not dull or damaged. | <input type="checkbox"/> |
| | check the tension of the saw chain frequently. | <input type="checkbox"/> |
| | check whether the CHAIN BRAKE (a device for stopping the chain) works properly before use. | <input type="checkbox"/> |
| | ensure that there is no other person or obstacle in the falling direction before cutting a standing tree and check whether you can retreat in appropriate directions when necessary. | <input type="checkbox"/> |
| move at least 10 ft (3 m) away from fueling site before starting engine. | <input type="checkbox"/> | |

Quick Check List for use: YOU MUST ...

Check! ⇩

| | | |
|--|---|--------------------------|
| DURING use, | do not hit the KICKBACK ZONE of the guide bar and saw chain on an object such as log or branch. | <input type="checkbox"/> |
| | hold chain saw firmly with both hands during operation. | <input type="checkbox"/> |
| | ensure that no other person is within a distance of 2 1/2 tree lengths from the tree while cutting a standing tree. | <input type="checkbox"/> |
| | keep firm footing and balance. | <input type="checkbox"/> |
| | not over-reach and never use the saw above shoulder height. | <input type="checkbox"/> |
| | never start or run the engine indoors. | <input type="checkbox"/> |
| | keep all parts of your body away from the muffler when the engine is running and while the engine is cooling down. | <input type="checkbox"/> |
| | keep all parts of your body away from the saw chain when the engine is running. | <input type="checkbox"/> |
| | do not put the tool on flammable materials such as dried grass, once you started the engine. | <input type="checkbox"/> |
| | ensure that the engine is shut off and any cutting attachments have completely stopped when assembling cutting attachment, or before clearing debris or removing grass from the cutting attachment. | <input type="checkbox"/> |
| stop using immediately if the tool appears defective or is operating abnormally. | <input type="checkbox"/> | |
| OUT OF use, | use only genuine HITACHI replacement parts as recommended by the manufacturer. | <input type="checkbox"/> |
| | use gloves when maintaining the tool (sharpening, replacing or touching saw chain, or adjusting chain tension). | <input type="checkbox"/> |
| | never alter or modify the tool | <input type="checkbox"/> |

If you have any questions or comments on this safety information, please contact the following:

Contact Customer Service

Service Department, Hitachi Koki U.S.A.,Ltd.,
1111 Broadway Ave., Braselton, Georgia 30517, U.S.A.
1-866-775-9429